



## Eco Systems - Installation Kits



(c) 2009 ETI Patents Pending

### INST-001


JIC #10 Inline Kit  
Cummins and Detroit Engines  
Use with ECO-4  
Not approved for E85



(c) 2009 ETI Patents Pending

### INST-004

5/16" or 3/8" Compression Assembly  
For applications where metal fuel lines are cut and installation is done with 5/16" or 3/8" compression fittings.  
Not approved for E85

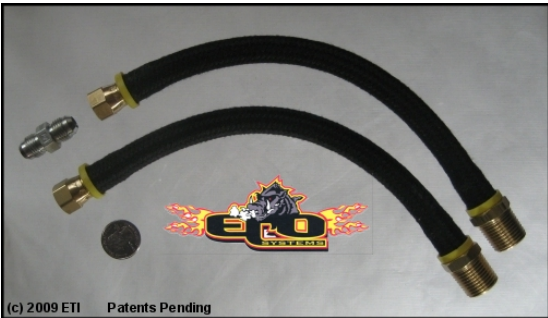

(c) 2009 ETI Patents Pending

### INST-002

JIC #6 Inline Kit  
Caterpillar Engines  
Use with ECO-4  
Not approved for E85



(c) 2009 ETI Patents Pending

### INST-005

3/8" Quick Disconnect Kit  
For 3/8" Fuel Line on GMC, Chevrolets, 6.0 Powerstrokes, and Dodge Hemi's.  
Connection at Fuel Rails, Fuel Filters, or Fuel Pumps.  
Not approved for E85



(c) 2009 ETI Patents Pending

### INST-003


Detroit and Mack Engines  
Use with ECO-4 or ECO-5  
Not approved for E85




(c) 2009 ETI Patents Pending

### INST-006

5/16" Quick Disconnect Kit  
For 5/16" Fuel Line on Ford, Chryslers, Nissans, Toyotas, Fords, 7.3 Powerstrokes.  
Connection at Fuel Rails, Fuel Filters, or Fuel Pumps.  
Not approved for E85

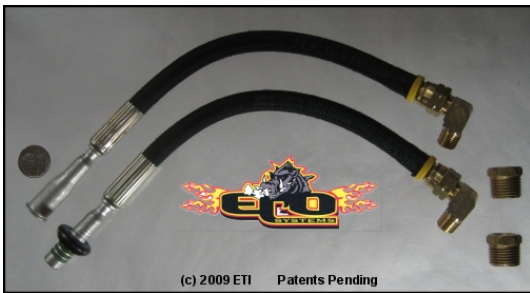


**INST-007**  
 Gates Quick Disconnect Kit  
 For most Fords, Jaguars, Range Rovers, Volvos,  
 Lincolns. Connection at Fuel Rails.  
 Not approved for E85

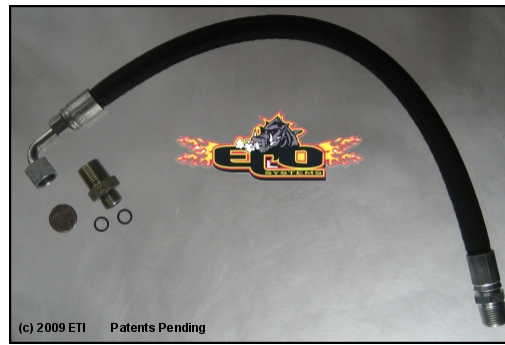

**INST-010**  
 3/8" Flat Head fitting on a Caterpillar Engine  
 Not approved for E85



**INST-007 90 Degree**  
 Gates Quick Disconnect Kit  
 For most Fords, Jaguars, Range Rovers, Volvos,  
 Lincolns. Connection at Fuel Rails.  
 Not approved for E85

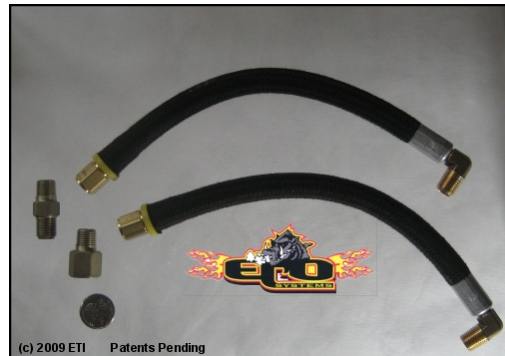

**INST-011**  
 For Hyundai  
 Not approved for E85




**INST-008**  
 1/2" Quick Disconnect Kit  
 For 1/2" fuel line on Duramax and 6.4 Powerstrokes  
 Not approved for E85



**INST-012**  
 For International Max Force 7  
 Not approved for E85



**INST-009**  
 For International Engines. DT466  
 Connection at Fuel Filter Outlet.  
 Not approved for E85

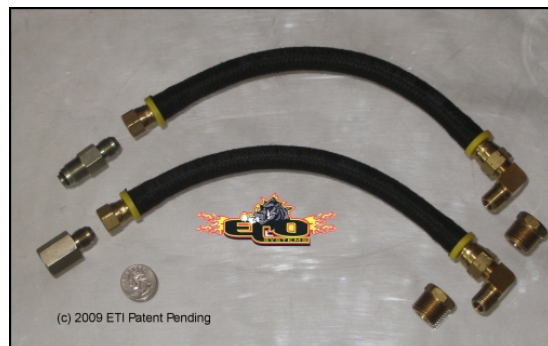

**INST-013**  
 For Chevrolet and GM Installations with no quick  
 disconnect. It installs on the outlet side of the fuel filter,  
 underneath the vehicle, inside the chassis.  
 Not approved for E85



**INST-014**

For International 365 - 444E  
Not approved for E85



**INST-015**

For Mercedes Diesel Trucks and Buses  
Not approved for E85



**INST-016**

For Dodge Diesel 5.9 Cummins  
Not approved for E85

**INST-MC**

5/16" Quick Disconnect Kit for Harley Davidson and other motorcycles, ATV Snow mobiles, etc that have a 5/16" fuel line.



**ECO Kit Details**

Installation should be done by a certified mechanic. Each kit contains fittings required to connect your new ECO System Fuel Enhancer to your engine fuel system, teflon tape, and two tie straps. Not approved for E85, though it will be an option soon.



**Use The Tape**

Fittings must be sealed with the included PTFE Thread Seal Tape. If they are attached when you receive them, unscrew, and tape.